

SEATEL

FREQUENTLY ASKED QUESTIONS

1. What are the descriptions behind each Front panel LED on the DAC controller?
 - **Tracking** - (Green LED)
 - **ON** indicates that the ACU has identified and is actively tracking the desired satellite to optimize the signal level (AGC).
 - **Blinking** indicates that the ACU is in search delay or is analyzing a satellite signal.
 - **Searching** - (Yellow LED)
 - **ON** indicates that the ACU is actively searching for your satellite signal.
 - **Target** - (Yellow LED)
 - **ON** indicates that the antenna is TARGETING (driving) to the specified Azimuth and/or Elevation position(s).
 - **Initializing** - (Green LED)
 - **ON** indicates that the Antenna is initializing. Initialization of the antenna will take approximately two minutes.
 - **Error** - (Red LED)
 - **ON** indicates that one, *or more*, discrete system errors have occurred.

